



APPLIANCES FOR LIVING

 **ARTUSI**
THE ART OF LIVING

AOMK1
OPERATION MANUAL

Congratulations, you are now the proud owner of an ARTUSI cooking appliance. Thank you for purchasing ARTUSI and welcome to the ARTUSI Family.

This instruction manual has been specially created to inform you of the full range of features your ARTUSI appliance has to offer and serves as an introduction to getting the very best out of your ARTUSI appliance.

We present detailed information on each of the features your ARTUSI appliance consists of. Once you have read this section you will be able to choose the most appropriate settings for your appliance when cooking different types of food.

We ask you to read the instructions in this booklet very carefully as this will allow you to get the best results from using your appliance. KEEP THE DOCUMENTATION OF THIS PRODUCT FOR FUTURE REFERENCE.

TO REGISTER YOUR PRODUCT WITH ARTUSI, PLEASE FILL OUT THE WARRANTY CARD AT THE END OF THIS BOOKLET AND POST IT TO: **REPLY PAID 83617**
LEICHHARDT NSW 2040

Dear Artusi Customer, please read this user manual carefully before using the product and, keep it permanently at your disposal.


Note: This user manual is prepared for more than one model. Some of the features specified in this Manual may not be available on your appliance.

All our appliances are only for domestic use, not for commercial use. Products marked with (*) are optional.

“THIS APPLIANCE SHALL BE INSTALLED IN ACCORDANCE WITH THE REGULATIONS FORCE AND ONLY USED IN A WELL VENTILATED SPACE. READ THE INSTRUCTIONS BEFORE INSTALLING OR USING THIS APPLIANCE”

“Conforms with the WEEE Regulations.”

Model: AOMK-1

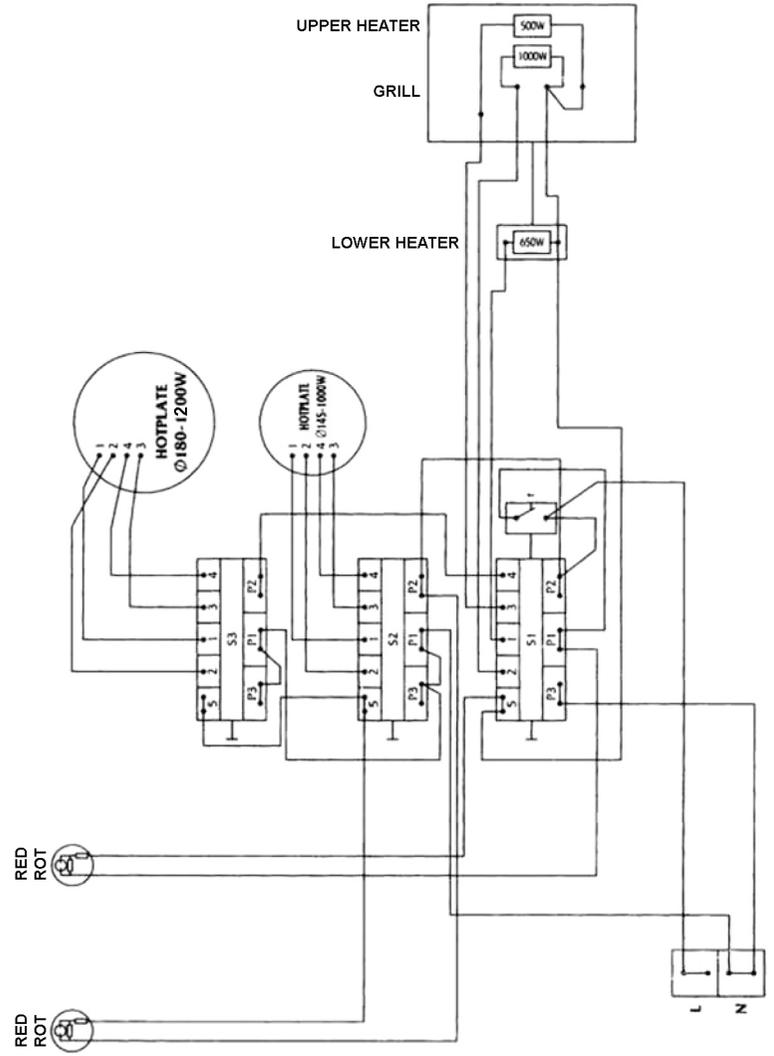

MAINTENANCE AND CLEANING

Set the power switch to 0, pull the plug out of the power socket and allow the tabletop oven to cool down before you clean it. Wipe down the appliance inside and outside with a damp cloth, moistened with soapy water only. Clean the hotplates with a suitable cleaner. Do not use sharp instruments for cleaning.

TECHNICAL SPECIFICATIONS

Characteristics	AOMK-1
Lower Heater	650 W
Upper Heater	500 W
Grill	1000 W
Ø180 Hot Plate	1200 W
Ø145 Hot Plate	1000 W
Thermostat	50° - 240°C
Timer	—
Dimensions	585 x 420 x 330
Net Weight	17.9 kg
Gross Weight	20.6 kg
Volume	22 liter



SAFETY WARNINGS

- The temperature of the accessible surfaces may be high when the appliance is operating.
- The appliance is not intended to be operated by means of external timer or separate remote control system.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervised or instruction concerning use of the appliance by a responsible person for their safety.
- Young children should be supervised to ensure that they do not play with the appliance .
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and Breakfast type environments

INSTRUCTIONS FOR INSTALLATION AND USE OF THE APPLIANCE

- Before use the appliance must be checked for transportation damage. In cases of damage that might effect safety, do not use the appliance. Contact an authorised service centre.
- Only plug the appliance into an appropriate earthed socket.
- Place the appliance on a flat surface.
- The diameters of the bases of the saucepans used should not be smaller than the diameters of the hotplates.
- Place the tabletop oven on a surface with a constant temperature, but not too near a wall. See installation below.
- CAUTION: over heated food fats can spontaneously ignite!
- Ensure that children cannot reach or open the tabletop oven when it is hot.
- During use the sides and hotplates will become hot. Take care to avoid burns.
- Keep the appliance under supervision when it is in use.
- Keep easily inflammable materials away from the appliance.
- Do not allow children to remain in the vicinity of a turned on or hot oven unsupervised.
- Do not use the appliance outdoors.
- The appliance must not be placed near open flames or other sources of heat.
- The tabletop oven must not be immersed in water or rinsed off under running water.
- Do not pull on the cord when unplugging. Pull on the plug itself.
- The tabletop oven must not be lifted by the handle/oven door.
- Do not allow the cord to hang over the edge of worktops or similar.
- Always unplug the appliance prior to cleaning it.
- Should the tabletop oven be used for purposes other than those it is intended for, the user must him or herself bear responsibility for any damage.
- Do not use the appliance if the cord is damaged. If the tabletop oven is not functioning as it should, is dropped on the floor or is damaged in any other way, it must be taken to an authorised service centre.
- NB! This tabletop oven is intended for normal domestic use only.

USE

The hotplates are controlled by the switches with symbols. Each hotplate has different power settings.

SWITCHES POSITION	0	1	2	3	4	5	6
Ø145 HOT PLATE	0	95 W	155 W	225 W	500 W	700 W	1000 W
Ø180 HOT PLATE	0	110 W	170 W	235 W	580 W	810 W	1200 W

INSTALLATION

This tabletop oven must be placed on a surface with a constant temperature. It must have gaps of at least 25 mm behind it and to its sides so that the ventilation can work properly. There must be a gap of at least 500 mm above the hotplates. Ensure that there are no inflammable materials near the tabletop oven since the sides become hot during use. Check that the voltage on the rating plate complies with the electricity supply network's voltage.

PRIOR TO USE

Ensure that the room is will ventilated during the burning in proces. The smoke that will be generated is not dangerous and will not last long, though you should avoid inhaling it directly. Allow oven door to remain open during steps 2 and 3.

1. Hotplates

Heat the hotplates at setting 3 and allow them to stay on for about 8 minutes. This process is necessary to burn away the hotplates protective layers.

2. Oven

Remove the grill and baking tray. Set the oven to 200°C and allow it to stay on for about 15 minutes. This process is necessary to burn away the oven's protective layer.

3. Grill

To burn away the grill's protective layer, set the oven switch to the grill position. Turn the switch with the clock to the grill symbol. Allow the grill to stay on for about 15 minutes.

	Upper and lower heating element. In this position, the heat of the oven may be adjusted to the desired heat via the thermostat. When the heat of the oven reaches the desired heat, the signal lamp below the switch turns off.
	Lower heating element only
	Upper heating element only
	When using the oven, the large hotplate will automatically switch off. You cannot use the large hotplate and the oven at the same time.
	Grill Keep the door of the oven open while grilling.



Worldwide Appliances Pty Limited

A.B.N. 45868077422

Office:

48-50 Moore Street, Leichhardt N.S.W 2040

Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

WARRANTY REGISTRATION

Your ongoing satisfaction with your artusi product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the artusi product purchased by you.

PRIVACY

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide Appliances Privacy Policy is available at www.artusi.com.au. Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to artusi or assist artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is

to keep a record of the artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your artusi product. Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration

Card. Please contact artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

WARRANTY

1. Warranty

Worldwide Appliances warrants that each artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

24 months warranty products:

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods

Freestanding Cookers - Gas and Electric Models (900mm Width)

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in

12 months warranty products:

Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths

Portable Appliances* – Benchtop Models and Portable Gas Models

2. What is not Covered by the Warranty.

The Warranty does not apply if an artusi product is defective by a factor other than a defect arising in the manufacture of the artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or

handling in transit (other than when Worldwide Appliances is responsible);

(f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control or Worldwide Appliances;

(g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised artusi service contractor*;

(h) use of parts, components or accessories which have not been supplied or specifically approved by artusi.

(i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the artusi product handbook provided to the purchaser upon purchase of the artusi product;

(j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or

(k) damages, dents or other cosmetic imperfections not affecting the performance of the artusi in respect of an artusi product purchased as a "factory second" or from display
The Warranty does not extend to light globes used in artusi products.

3. Domestic Use

Each artusi product is made for domestic use. This Warranty may not extend to artusi products used for commercial purposes.

4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

Continued over...

5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an artusi product.

6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

- (i) contravene the law of the relevant jurisdiction; or
- (ii) cause any part of the Warranty to be void.

(c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms,

conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of Worldwide Appliances to you for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:

- (i) replacing or repairing the defective part of the artusi product;
- (ii) paying the cost of replacing or repairing the defective part of the artusi product;
- (iii) replacing the artusi product; or
- (iv) paying the cost of replacing the artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a

major failure.

8. Defects

Any part of an artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances. Worldwide Appliances reserves the right to inspect and test artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

*To locate your closest artusi authorised service agent please contact us on 1300 652 100 or visit www.artusi.com.au

ALL SERVICE CALLS MUST BE BOOKED THROUGH AN AUTHORISED DEALER OR WARRANTY DEPARTMENT ON 1300 652 100 OR stokesaps.com.au/artusi-service
01032014



Warranty Card tear off

WARRANTY REGISTRATION CARD
01052013

Please complete and send to ARTUSI at: REPLY PAID 83617
LEICHHARDT NSW 2040

Last Name:		First Name:	
Address:			
State:	Postcode:	Email:	
Home Phone:		Mobile:	
Purchase Date: / /		(Please attach proof of purchase to validate warranty)	

MODEL NUMBER	SERIAL NUMBER (if you cannot locate the serial number please call ARTUSI on 1300 694 583)
1	
2	
3	
4	

01032014



DISCLAIMER

Worldwide Appliances PTY LTD, trading as ARTUSI, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of ARTUSI and are not authorised to bind ARTUSI by any express or implied undertaking or representation.

ARTUSI OFFICES ARE OPEN DAILY FROM 9AM-5PM AND SATURDAYS 10AM-4PM

NSW & ACT (HEAD OFFICE)
48-50 MOORE STREET
LEICHHARDT
F 02 8569 4699

VIC, TAS & SA
1211 TOORAK ROAD
CAMBERWELL
F 03 9809 2155

QLD
1/42 CAVENDISH ROAD
COORPAROO
F 07 3397 0850

WA & NT
UNIT 10/55 HOWE STREET
OSBORNE PARK
F 08 9201 9188

NZ
PO BOX 11160
SOCKBURN CHRISTCHURCH
F 03 344 5906

P: 1300 649 583

ARTUSI.COM.AU